





POWERA ADVANCED BATTLE DRAGON WIRELESS CONTROLLER

USER MANUAL

TWO-YEAR LIMITED WARRANTY

For warranty details or support with your authentic PowerA accessories, please visit www.powera.com/supporten.

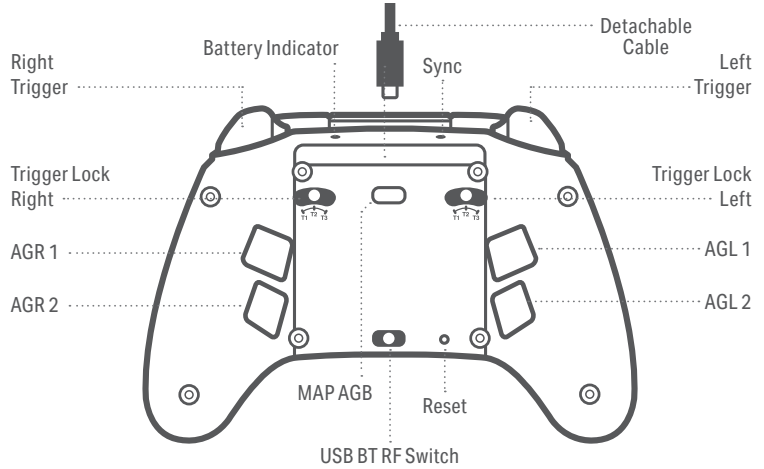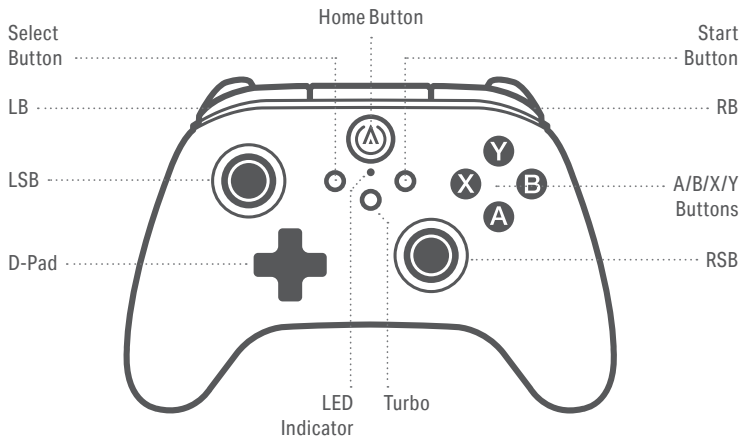

ENGLISH

CONTENTS


- Controller
- 5 ft. / 1.5 m USB-C® to USB-A Cable
- 2.4 GHz USB Dongle
- User Manual

CHARGING CONTROLLER


For best results, fully charge controller prior to first use.

1. Using a USB-C Cable connect to the USB-C port at the top of the controller, and connect the other end to any powered USB source.
2. When charging, the battery indicator LED will flash AMBER.
3. When fully charged the battery indicator LED will be solid GREEN.
4. Battery Indicator will flash RED when battery is low.

WIRELESS MODE: 2.4G


1. Insert wireless USB dongle into open PC USB port.
2. Select "RF" on the mode switch on back of controller. 
3. If controller is off, press the Home button (icon) to turn on (LED will illuminate WHITE).
4. Press and hold the SYNC button (icon) on top of the controller for 3 seconds to enter pairing mode (LED will flash WHITE rapidly).
5. Enter the Settings menu on your device and choose the PC Wireless controller. The LED will turn solid WHITE when connected.

WIRELESS MODE: BLUETOOTH

1. Select "BT" on the mode switch on back of controller. 
2. If controller is off, press the Home button (icon) to turn on (LED will illuminate BLUE).
3. Press and hold the SYNC button (icon) on top of the controller for 3 seconds to enter pairing mode (LED will flash BLUE rapidly).

4. Enter the Bluetooth settings on your device.
5. Select the PC Wireless Controller.

WIRED MODE USB

1. Select "USB" on the mode switch on back of controller. 
2. Using the included USB-C Cable, connect to the USB-C port at the top of the controller, and connect the other end to an available USB port on the PC.
3. If controller is off, press the Home button (icon) to turn on (LED will illuminate GREEN).

NOTE: A previously paired device will automatically pair to the controller when powered on.

MODE XINPUT TO DIRECT INPUT (2.4 RF / USB WIRED MODE ONLY)

1. Press and hold the SELECT and START buttons simultaneously for 3 seconds.
2. LED indicator will flash 3 times to indicate MODE has been changed.
3. To change modes again, press and hold SELECT and START buttons again for 3 seconds until LED flashes 3 times.


TRIGGER LOCK ADJUSTMENT



ROTATING ANALOG STICK

The analog stick height can be adjusted to one of 3 heights: • Standard • Medium • Tall

To change heights, turn the analog stick cap clockwise until you feel it catch the next height notch. If you want to go to the tallest height turn it a second time. To return to the standard height, turn the analog stick cap a third time and the analog stick will drop back down to the standard height.

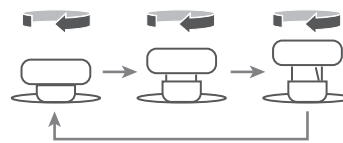




POWERING OFF

Hold the Home button (icon) for 5 seconds to turn controller off and save battery capacity.

BATTERY STATUS INDICATION

- LOW BATTERY = RED LED
- BATTERY CHARGING = AMBER LED
- BATTERY CHARGED = GREEN LED

ASSIGNING THE ADVANCED GAMING BUTTONS

- A. Press the Program Button on the back of the controller for 3 seconds. 
- B. The LED Indicator will flash, signaling the controller is in assign mode. 
- C. Press 1 of the following buttons (A/B/X/Y/LB/RB/LT/RT/Left Stick Press/Right Stick Press/D-pad) to re-assign. 




- D. Then press the Advanced Gaming Button (AGR1/ AGR2 or AGL1/AGL2) that you wish to assign. The LED connection indicator will stop flashing, signaling the Advanced Gaming Button has been set.
- E. Repeat for the remaining Advanced Gaming Buttons.

NOTE: Advanced Gaming Button assignments will remain in memory even after disconnected.

RESETTING THE ADVANCED GAMING BUTTONS

1. Hold the Program Button down for 2 seconds. The LED Connection Indicator will slowly flash, signaling the controller is in assign mode.
2. Press the previously assigned button for 5 seconds, and the function will be cleared.

TURBO SETTING

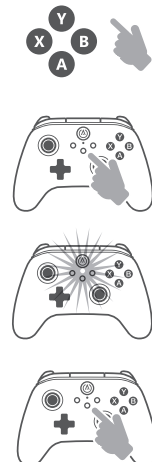

- A. Press and hold one of the A,B,X,Y buttons that you wish to set to Turbo.
- B. While holding down the desired button press the Turbo button.
- C. The LED indicator will flash 3 times to show you Turbo has been set.
- D. Press the Turbo button again to turn Turbo off.

TROUBLESHOOTING

PROBLEM: My controller will not power on.

SOLUTION: Confirm the controller is fully charged. Plug in to recharge as needed.

PROBLEM: I don't see my PC controller listed in my device's settings.

SOLUTION: Press and hold the Bluetooth sync button on top of controller for 3 seconds to enter pairing mode (LED will flash rapidly).

PROBLEM: My wireless controller is not pairing.

SOLUTION: Confirm the battery is charged by plugging in USB-C cable.

SOLUTION: Confirm you are following the Wireless pairing process.

SOLUTION: Insert paper clip into Factory Reset Hole as marked above to reset controller to factory settings.

For latest FAQs, visit www.powera.com/support

TWO-YEAR LIMITED WARRANTY

For warranty details or support with your authentic PowerA accessories, please visit

www.powera.com/support

MOTION WARNING

Playing video games may cause muscle, joint, skin, or eye discomfort. Follow these instructions to avoid problems such as tendinitis, carpal tunnel syndrome, skin irritation or eyestrain:

- Avoid excessive play. Take a 10- to 15-minute break every hour, even if you don't think you need it. Parents should monitor their children for appropriate play.
- If your hands, wrists, arms, or eyes become tired or sore while playing, or if you feel symptoms such as tingling, numbness, burning, or stiffness, stop and rest for several hours before playing again.
- If you continue to have any of the above symptoms or other discomfort during or after play, stop playing and see a doctor.

MANUFACTURED FOR

ACCO Brands USA LLC

4 Corporate Drive, Lake Zurich, IL 60047

ACCOBRANDS.COM | POWERA.COM | MADE IN CHINA

ADDITIONAL LEGAL

© 2024 ACCO Brands. All Rights Reserved. PowerA and PowerA Logo are trademarks of ACCO Brands.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by ACCO Brands is under license. Other trademarks and trade names are those of their respective owners.

USB-C® is a registered trademark of USB Implementers Forum.




バトルドラゴン・アドバンスド・ワイヤレスコントローラー

ユーザーマニュアル

対応機種 (OS)
 ・Windows 10,11 以降
 ・Android 6 以降

国内正規品
 2年保証

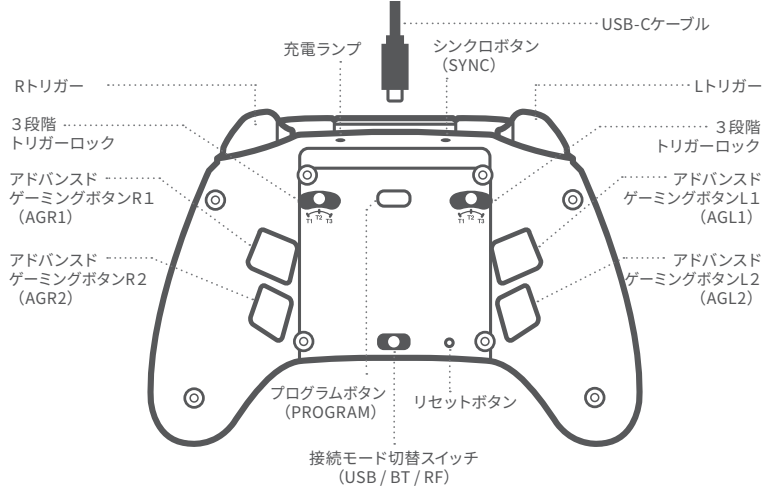

パッケージ内容

- ・コントローラー本体
- ・USB-C to USB-Aケーブル (1.5m)
- ・USBレシーバー (RFモード用)
- ・ユーザーマニュアル

コントローラーの充電

ご使用前にコントローラーを充電してください。

1. 付属のUSB-CケーブルのUSB-C側をコントローラー上部のUSB-C端子に接続し、もう一方の端子を任意のUSB-A端子に接続します。
2. 充電中は充電ランプがオレンジ色に点滅します。
3. 充電が完了すると充電ランプが緑色に点灯します。
4. バッテリーの充電残量が少ない状態になると充電ランプが赤色に点滅します。

5. デバイスの設定で、USBレシーバーを有効にしてください。(詳細は接続するデバイスのユーザーマニュアルをご確認ください。) 接続されるとステータスランプが白色に点灯します。

注: 以前にペアリングしたデバイスは、コントローラーの電源がオンになると自動的にコントローラーとペアリングされます。

ワイヤレス: Bluetoothモード

コントローラー背面の接続モード切替スイッチで「BT」を選択します。



<初めて使う場合>
 <新しいデバイスに接続する場合>

初めて使う場合や、新しいデバイスに接続する際は、下記の手順に沿ってペアリングが必要です。

1. コントローラーの電源がオフの場合、ホームボタンⓄを押して電源をオンにします。電源がオンになると、ステータスランプが青色に点滅します。
2. コントローラー上部のシンクロボタンを3秒間長押しすると、ステータスランプが青色ですばやく点滅し、ペアリングモードであることを示します。
3. デバイスのBluetooth設定に入り、「Adv Battle Dragon」を選択します。

<ペアリング済みの場合>

コントローラーの電源がオフの場合、ホームボタンⓄを押して電源をオンにします。電源がオンになると、ステータスランプが青色に点灯します。

注: 以前にペアリングしたデバイスは、コントローラーの電源がオンになると自動的にコントローラーとペアリングされます。詳細は接続するデバイスのユーザーマニュアルをご確認ください。

ワイヤレス: RFモード (USBレシーバーを使用)

1. USBレシーバーをPCのUSB-A端子に挿入します。
2. コントローラー背面の接続モード切替スイッチで「RF」を選択します。
3. コントローラーの電源がオフの場合は、ホームボタンⓄを押して電源をオンにします。電源がオンになるとステータスランプが白色に点灯します。
4. コントローラー上部のシンクロボタンを3秒間長押しすると、ステータスランプが白色で点滅し、ペアリングモードであることを示します。



有線: USBモード

1. コントローラー背面の接続モード切替スイッチで「USB」を選択します。
2. 付属のUSB-CケーブルのUSB-C側をコントローラー上部のUSB-C端子に接続し、もう一方の端子をPCのUSB-A端子に接続します。
3. ステータスランプが緑色に点灯します。




Xinput / DirectInput モード切り替え (ワイヤレス: RFモード / USBモード時のみ)

1. SELECTボタンとSTARTボタンを同時に3秒間長押しします。
2. ステータスランプが3回点滅し、Xinput / DirectInputのいずれかに切り替わったことを示します。
3. もう一方のモードに切り替える場合は、再度SELECTボタンとSTARTボタンを同時に3秒間長押しします。

トリガーロックの調節



アナログスティックの高さ調節

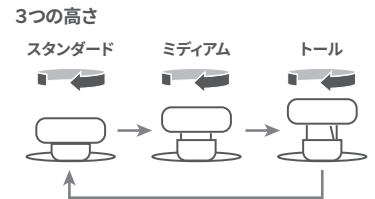

アナログスティックのキャップを時計回りに回すと高さが3段階に調節できます。

電源オフ (ワイヤレス: RFモード / BTモードのみ)

- ・ホームボタンⓄを5秒間長押しすると、コントローラーの電源がオフになります。
- ・1時間以上操作が行われないと自動的に電源がオフになります。

充電ランプについて

充電残量が少ない状態 = 赤色 (点滅)
 充電中 = オレンジ色 (点滅)
 充電完了 = 緑色 (点灯)


アドバンスドゲーミングボタンの割り当て




A. コントローラーの背面にあるプログラムボタンを3秒間長押しします。



B. ステータスランプがゆっくりと点滅し、コントローラーがプログラムモードであることを示します。



C. アドバンスドゲーミングボタンに割り当てるボタン (A/B/X/Y/LB/RB/LT/RT/左アナログスティックボタン/右アナログスティックボタン/十字ボタンのいずれか) を押します。ステータスランプがすばやく点滅します。

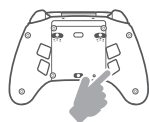

D. 機能を実行したいアドバンスドゲーミングボタン (AGR1/AGR2/AGL1/AGL2のいずれか) を押します。ステータスランプの点滅が止まり、アドバンスドゲーミングボタンへの割り当てが完了したことを示します。

E. 残りのアドバンスドゲーミングボタンも同様に設定します。

注: アドバンスドゲーミングボタンの割り当ては、接続が解除されてもメモリに保存されています。

アドバンスドゲーミングボタンのリセット

1. プログラムボタンを3秒間長押しします。コントローラーがプログラムモードになると、ステータスランプがゆっくり点滅し始めます。
2. リセットしたいアドバンスドゲーミングボタン (AGR1/AGR2/AGL1/AGL2のいずれか) を5秒以上長押しします。

連射機能



A. 連射機能を設定したいA,B,X,Yボタンのいずれかを長押しします。



B. 設定したいボタンを押しながら、TURBOボタンを押します。



C. ステータスランプが3回点滅し、連射機能が設定されたことを示します。



D. A~Cの手順を再度繰り返すと連射機能がオフになります。

トラブルシューティング

Q1: コントローラーの電源が入りません。

A1: コントローラーが充電されていることを確認してください。充電残量が少ない場合は、コントローラーを充電してください。

Q2: デバイスの設定にコントローラーが表示されません。

A2: 「ワイヤレス: Bluetoothモード」の手順を再度試してみてください。

Q3: コントローラーがペアリングされません。

A3-1: コントローラーが充電されていることを確認してください。充電残量が少ない場合は、コントローラーを充電してください。

A3-2: 「ワイヤレス: RFモード」または「ワイヤレス: Bluetoothモード」の手順を再度試してみてください。

A3-3: 上記を試してもペアリングされない場合は、クリップの先端やつまようじなど先の尖ったものでリセットボタンを押して、コントローラーを工場出荷時の設定にリセットしてください。(折れやすいものは使用しないでください。)

最新のFAQとサポートについては、Powera.com/ja-jp/contact-us/をご確認ください。

バッテリーに関する警告

• お客様ご自身によるバッテリーの修理、分解、改造は絶対に行わないでください。バッテリーが損傷し、過熱、火災、けがの原因となることがあります。

• バッテリーが内蔵されているため、コントローラーを処分する際は、お住まいの地域のルールに従ってください。不明な場合はお住まいの市町村、自治体へお問い合わせください。

• バッテリーを搭載した機器は、高温環境下(直射日光の当たる場所や炎天下の車内など)で使用したり放置したりしないでください。高温になるとバッテリーが過熱または発火する可能性があります。また、バッテリーの性能や寿命に悪影響を及ぼすことがあります。

• バッテリーを搭載した機器は、静電気の多い環境で使用しないでください。過度の静電気はバッテリーの内部安全対策を損ない、過熱や火災の危険性を高めることがあります。

• バッテリーから漏れた液体が目に入った場合は、目をこすらないでください。目を傷つけないように、すぐにきれいな流水で十分に洗い流し、医師の診察を受けてください。

• 使用中、充電中、保管中にバッテリーが異臭を発生したり、発熱したりするなど、何らかの異常が見られたら、ただちに充電機器から取り外し、金属性の箱など密閉された耐火容器に入れるか、人や燃えやすいものから離して安全な場所に置いてください。

• コントローラーやバッテリーを加熱したり、火の中に入れてたり、火に近づけたりしないでください。

警告

健康上の安全のために、ご使用前によくお読みいただき、その内容を必ずお守りください。

※小さなお子様がご使用になる場合は、保護者の方がよくお読みいただいたうえで、お子様に付き添ってご使用ください。

• 強い光や点滅の刺激を受けたり、テレビの画面などを見たりしているとき、ごくまれに一時的に筋肉のけいれんや意識の喪失、めまい、視覚変化などを経験する人がいます。こうした症状を経験した人は、使用する前に必ず医師と相談してください。

• また、使用中にこのような症状が起きた場合には、直ちに使用を中止し、医師の診察を受けてください。

• 長時間連続して使用しない。目安として、1時間ごとに10~15分休憩してください。

• 目や手・腕・足・顔など身体の一部に痛みや疲労感、不快感があるときは、すぐに使用を中止する。

• これらの症状が続く場合は、医師の診察を受けてください。

© 2024 ACCO Brands. PowerAおよびPowerAロゴはACCO Brandsの登録商標または商標です。

Bluetooth®ワードマークおよびロゴは登録商標であり、Bluetooth SIG, Inc. が所有権を有します。

ACCO Brandsは使用許諾の下でこれらのマークおよびロゴを使用しています。

その他の商標および登録商標は、それぞれの所有者の商標および登録商標です。

USB-C®は、USB Implementers Forumの登録商標です。

保証規定

商品に付属している保証書の内容をご確認の上、大切に保管してください。

お買い上げ時のレシートや領収書がない場合は無効となりますのでご注意ください。

保証期間中に正常な使用状態で万一故障した場合には、保証規定事項に基づき、無償修理または交換いたしますのでお買い求めの販売店、または当社へお申し出ください。

保証期間内でも次のような場合にはサポートを提供できない場合がございます。

- 使用上の誤り、または改造や不当な修理による故障または損傷
- お買い上げの後の落下、引越し、輸送等による故障または損傷
- 火災、地震、水害、落雷その他天災地変ならびに公害や異常電圧、その他外部要因による故障または損傷
- 過酷な条件のもとで使用されて生じた故障または損傷
- 保証書の提示のない場合

• お買い上げ年月日、お客様名、販売店名の記入のない場合、あるいは字句を書き換えられた場合

保証書は日本国内においてのみ有効です。保証書は再発行いたしませんので紛失しないように大切に保管してください。

保証書は明示した期間、条件のもとにおいて無償対応をお約束するものです。したがって、保証書によってお客様の法律上の権利を制限するものではありませんので、保証期間経過後の修理等についてご不明な場合はお買い上げの販売店または当社へお問い合わせください。

保証書	
保証規定をよくお読みください。この保証書は再発行いたしませんので大切に保管してください。	
ご購入日	年 月 日
保証期間	ご購入日から2年間
お客様	お名前 様
	ご住所
販売店名	

※製品保証を受ける際はお買い上げ時のレシートまたは領収書が必要です。

アコ・ブランドズ・ジャパン株式会社
www.accobrand.com
 e-mail: jp.service@acco.com